

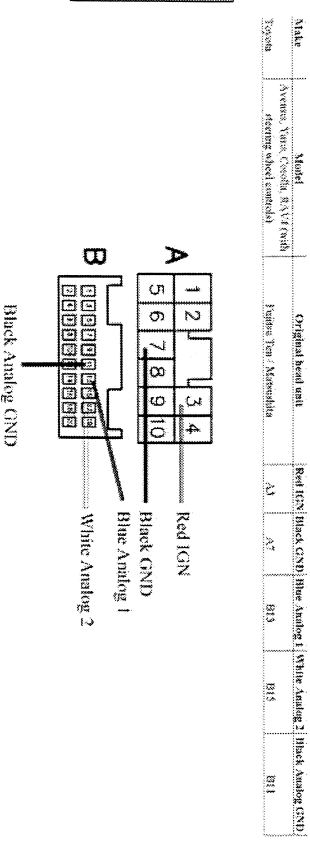
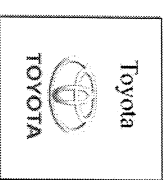
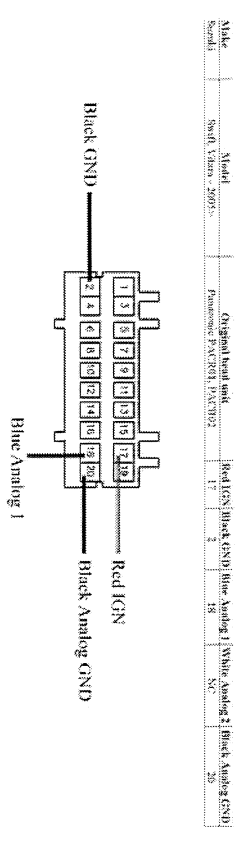
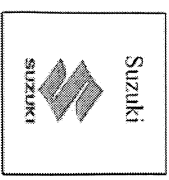
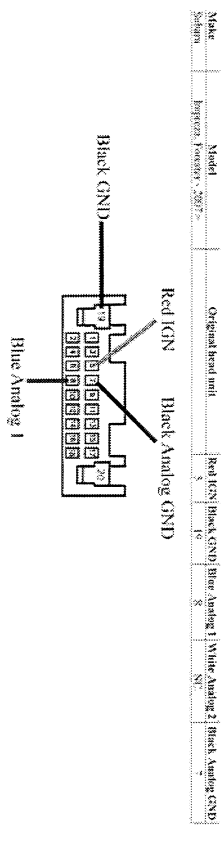


UNI-IR Installation Guide

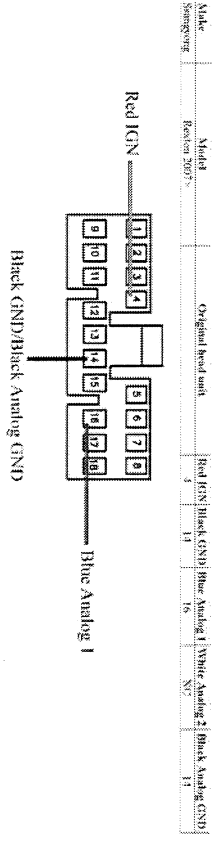


UNI-IR Installation Guide

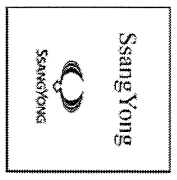



Product Information

- The Uni-IR enables control of an aftermarket head unit (with IR control) from the steering wheel controls of an analog vehicle. The head unit must have a remote control handset for the Uni-IR to learn from.
- The Uni-IR is compatible with most IR remote control systems operating between 36 – 40KHz. It is not suitable for Sony Hirk models.
- The Uni-IR is compatible with analog vehicles, allowing up to 10 buttons on the steering wheel to be programmed. Once the IR commands are learnt, the data will be stored in flash memory to ensure retention when power is removed.

Connecting to the vehicle






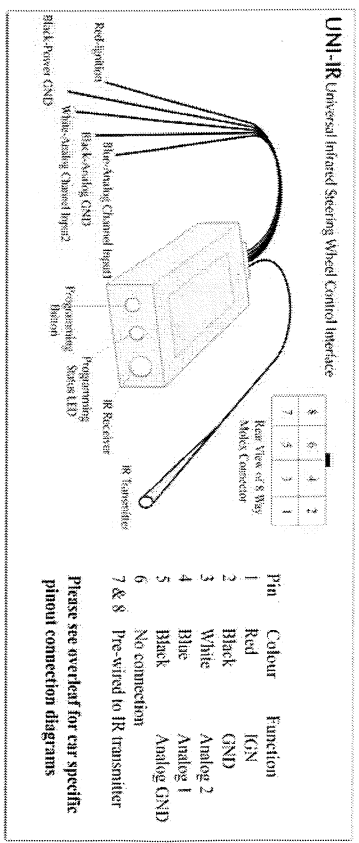


! Please note that connector views are shown from terminal side and not wire side







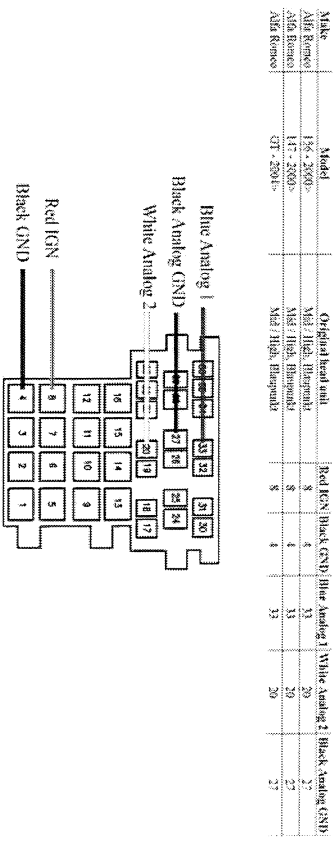
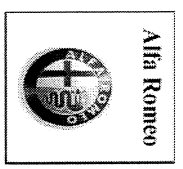




Connects2 is the original

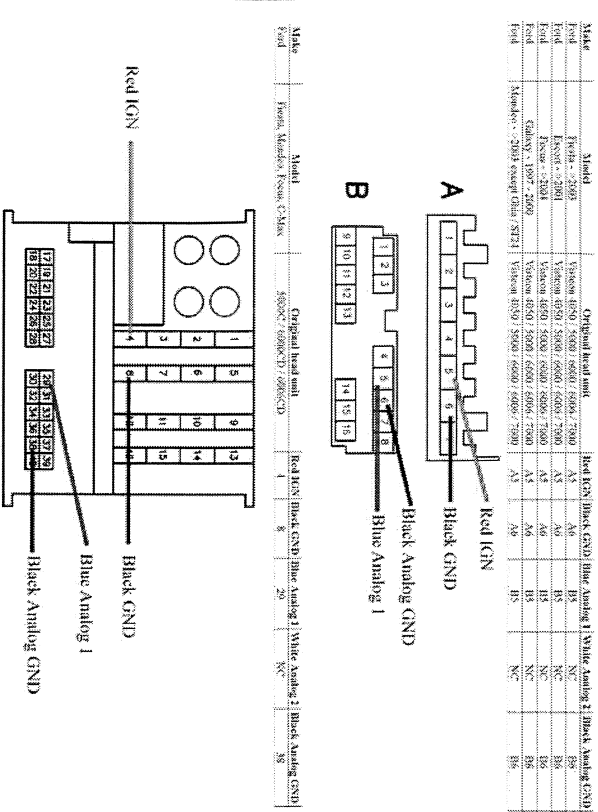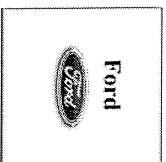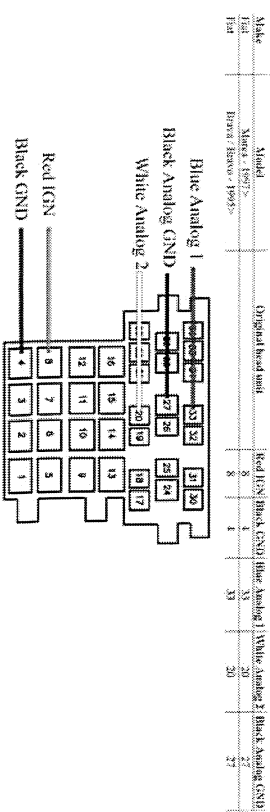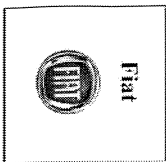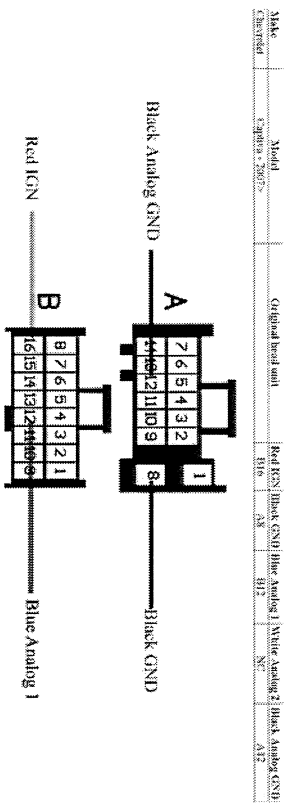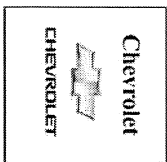

Connects2 is the original

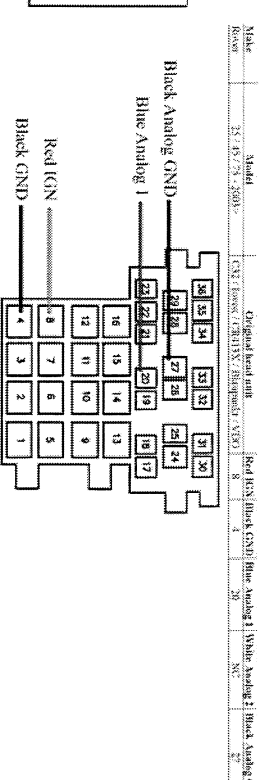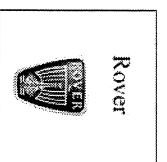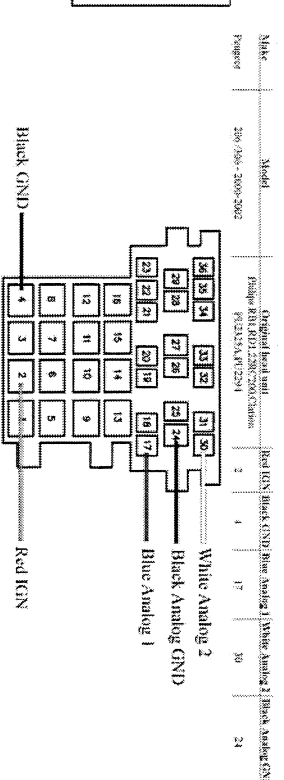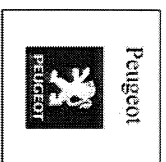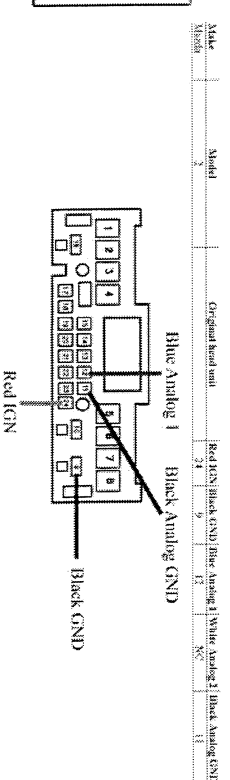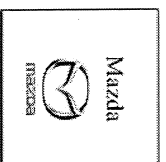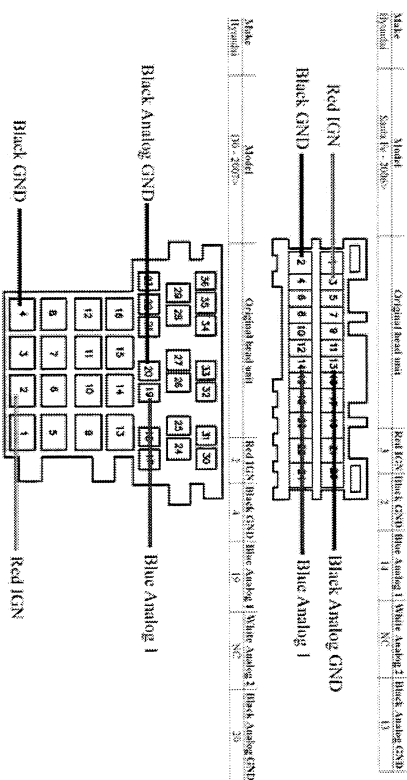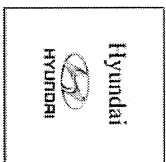

UNI-IR

Installation Guide



Programming the UNI-IR

During the process steering wheel buttons are mapped to the IR commands from the IR remote handset.

1. Press and hold the Programming Button until the Programming Status LED illuminates (this could take up to 5 seconds)
2. Within 10 seconds, press a steering wheel button – the LED will blink once.
3. Within 10 seconds, press the function that you require on the remote controller – the LED will blink once.
4. Repeat this procedure for each steering wheel button you require. (The interface will support up to 10 buttons)
5. Programming mode will terminate if the UNI-IR adapter sees no activity for more than 10 seconds. This is indicated by the Programming Status LED turning off.
6. Hold the IR Transmitter approx. 30cm away from the aftermarket radio and check that each steering wheel button functions correctly.
7. Install the IR transmitter where it can point at the radio without any obstructions. The aftermarket head unit needs to see the IR Transmitter in order to receive the steering wheel commands.

Please note: If the buttons appear to function erratically, adjust the position of the IR Transmitter.

If you wish to reconfigure the adapter or you change the aftermarket head unit, simply go back to step 1.