


APMZAUX Wiring


Back of Ford / Mazda Radio



APMZAUX

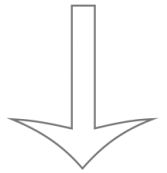

**Phone, MP3
or CD Player**
must have 3.5mm head-
phone socket

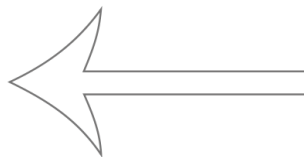

AP235 or similar

**Press "AUX" button on front of radio to switch to device.
Note: will not suit older cars with Tape/MD button**