


Aerpro[®]
First Choice

powered by

Connects[®]
2

APVMC13
Rear View Camera OBD-Coder

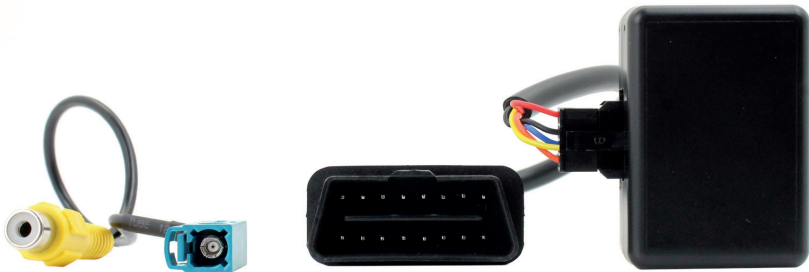

www.aerpro.com

ABOUT THIS PRODUCT...

APVMC13

Rear View Camera OBD-Coder for Mercedes Sprinter W906 with Audio15 navigation unit. Allows the addition of an aftermarket rear camera to the OEM screen.


Prior to Installation

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure you use the correct tools to avoid damage to the vehicle or product.

Aerpro can not be held responsible for the installation of this product.

Technical Support

Aerpro want to provide a fast and suitable resolution should you encounter any technical issues. With this in mind, when contacting Aerpro, try to provide as much information as possible. This will speed up the process and help us to help you. Please use our dedicated online technical support centre: intranet.tdj.com.au/ support

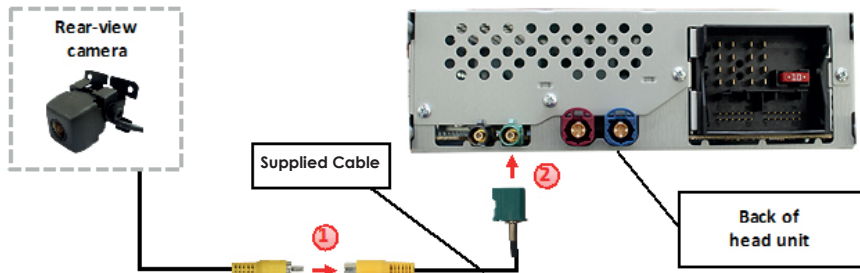

1. Connect the video RCA of the after-market rear-view camera to the female RCA connector of the supplied cable.
2. Connect the Fakra plug of the supplied cable to the green Fakra socket of the Audio15 unit.

Camera Coding

1. Locate OBD-port and remove cover
2. Turn on ignition
3. Wait until the head-unit has booted up
4. Plug coder into OBD-port
5. Leave coder in the OBD-port for around 30 seconds
6. Remove coder from the OBD-port

To reverse the coding repeat steps 1-6

After the first use on a vehicle, the coder CAM-MB3-AD is personalised to this vehicle and can be used unlimited times to code or reverse coding on this vehicle.

LED Information

LED	Status	Explanation
Green	Lights	Coding procedure successfully completed
Green	Flashes	Coding process running
Red	Lights	Remove coding procedure successfully completed
Red	Flashes	Coding process failed/license violation
Green + Red	Lights	CAN communication error - Abort of the diagnostic session