

**Installation Manual
Double DIN Kit FP8020 &
FP953000**




Double DIN Kit contents

- (1) Metal Frame • (2) Installation Kit • (3) Trim Frame


Installation Manual Double DIN Kit

1. Prepare the Double DIN head unit.

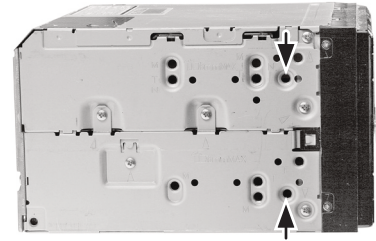


(sample photo)

Mount the metal brackets to the double DIN head unit.

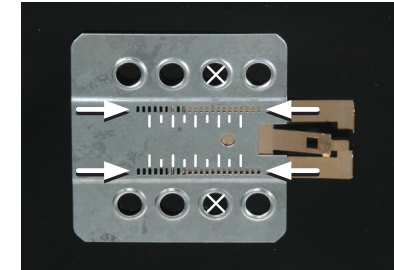

(sample photo)

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)

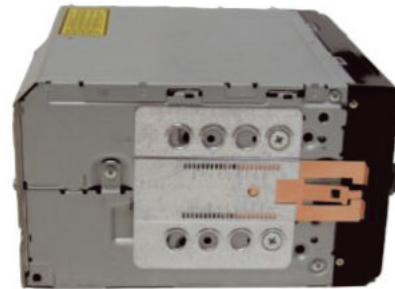

2. Remove the OEM head unit
3. Place Metal Frame into the dashboard.

Connect all required circuit points and push the double DIN head unit in the metal frame until it snaps in.

Place the trim frame.